

STRAPACK RQ8 AUTOMATIC

Strap Loading Procedure

WARNING: PLEASE PRESS THE EMERGENCY STOP BUTTON (10) AND TURN OFF THE MAIN POWER SWITCH BEFORE ATTEMPTING TO REPLACE THE STRAP COIL

NOTE: Before replacing strapping material, always remove the remaining strap from the pool chamber

1. Fit the new coil of strapping material while it is still secured in a roll, ensuring that the strapping is wound in a clockwise direction, as shown in Fig. 001

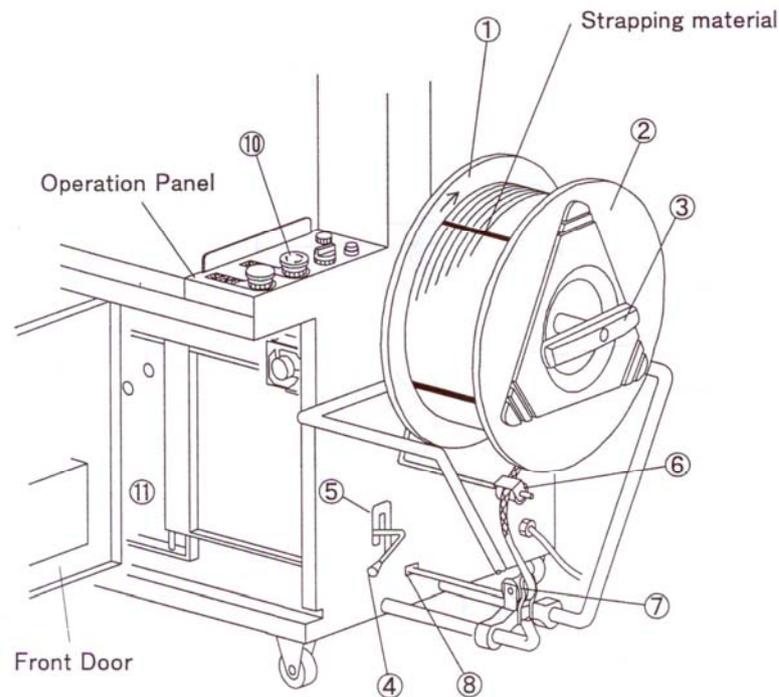


FIG. 001

2. Place the new coil of strapping material onto the rear circular disc brackets (1) and then fit the front circular disc (2) and reel nut handle (3), tightening in a clockwise direction. Cut the ties securing the coil of strapping material and remove any ties or sticky tape.

- Lift the touch lever (4) in the slot (5) and move it from position A to position B, as shown below.

Lever operation




Position A



Position B

- Feed the free end of the strap through the free slide roller (6) and twist the strap tip 90° so that the inside face of the strap faces down to the floor.

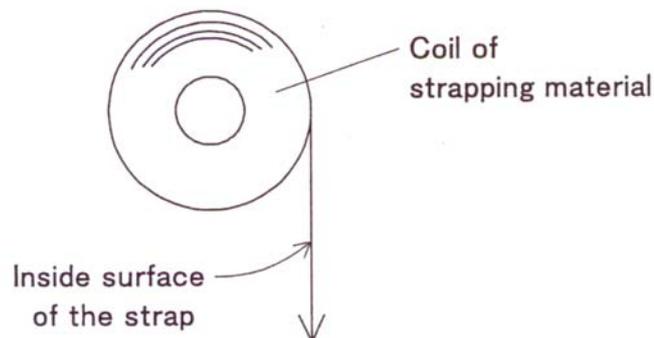

- Feed the strap through free angle roller (7) and insert approx 15 to 20cm of strap into the hole on the side of the strapping machine (8). *Please note that when the strap is inserted into the hole (8), the inside face of the strap MUST face down towards the floor*
- Move the touch lever (4) from position B to position A and turn on the power switch
- Turn the emergency stop switch (10) clockwise to release it and press the power indicator switch on the operator panel. The pool motor will start rotating and the strapping will be pulled into the pool chamber (11)
- When the strap coil stops rotating and the power indicator switch is illuminated, the machine can be used